


## FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT RWS102

TRANSFORMER TAPPING OPTIONS						
Nominal 50/60Hz						
TYPE 1						
220/230						
380/400						
400,415/420						
440/460						
250mA ANTI-S URGE						
TYPE 2						
346/380						
480/500						
240/240						
550/575						
FUSE FS1=250mA ANTI-SURGE						

### REFER TO SHEET 2 FOR NOTES & OPTION PCB'S IF FITTED

THE ACTUATOR MUST BE PROTECTED USING SUITABLY RATED HIGH SPEED SEMI-CONDUCTOR FUSES ON THE INCOMING SUPPLY. SUGGESTED FUESES :-IQ10-20:10 Amp FERRAZ G330010 IQ25-35:20 Amp FERRAZ K330013 ALTERNATIVES = IQ10-20:10 Amp SIBA 50-179-06/10A IQ25-35:20 Amp SIBA 50-179-06/20A OR EQUIVALENT PROTECTIVE DEVICE.

- 1	<u>Date</u> 31012	PMJ	NOTE 2 UPDATED.	www. <b>rot</b>	O <b>rk</b> .com	IQM + FOLOMA	ATIC + CPT		
Ĭ	00113 230614	MR	Re-track of the 24V DC pion of SK14 to behind the diode. 400v added to type 1 tapping Y. Note added to	ROTORK CONTROLS LTD BATH, BA1 3JQ	ROTORK CONTROLS INC ROCHESTER NY 14624, USA	Drawn by: PMJ Date : 290812 Base WD: 203B0000		No	Sheet
5	30616		sheet 2 note 1. Updated notes on page 2.	Tel:01225-733200	Tel:585-247-2304	Job No : MI No :	B1C1B2C2	5	of 2

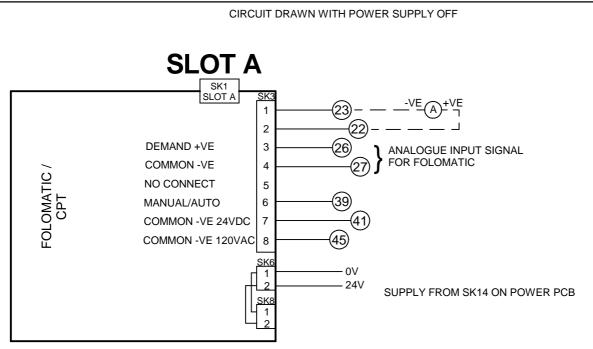

FOR MANUAL/AUTO CONNECTIONS AND DETAILS OF FOLOMATIC/CPT FUNCTIONS REFER TO ROTORK PUBLICATION PUB002-041

### NOTES 1.FUSES:

-PS1 is a self-resetting fuse.

-Refer to publication PUB002-039 for approved fuses FS1 and FS2. -Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed. 2.REMOTE CONTROL:

-For typical remote control circuits refer to: -RWS indicated or PUB002-041.

- -For DC and AC control, connect -ve/0V to terminal 36.
- -(For negative switch / positive common, refer to RWS indicated).
- -Control signal threshold voltages:

-DC: "on" ≥16Vdc / "off" ≤8Vdc, max 60Vdc.

-Control signal duration to be 100ms minimum.

-Maximum current drawn from remote control signals is: -8mA at 24Vdc

-Supply provided on terminals 4 & 5:

-Intended for remote control. -Max external load 5W at 24Vdc

### **3.INDICATION:**

-For typical position, status and alarm indication see PUB002-041. -"S" contacts are user configurable and are shown in their default setting.

-Refer to PUB002-040 for functions and configuration instructions. -Monitor Relay indicates actuator availability for remote control (shown "unavailable"). It can be configured to exclude local/remote selection. -Refer to PUB002-040 for monitored functions and configuration instructions.

-Voltage applied to indication contacts must not exceed 150Vac -Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

### 4.BATTERY:

-Battery maintains local and remote "S" contact indication only. -Refer to installation manual for approved replacement battery types.

Circuit Diagram Number 203B0000 2 5 of 2

# See Sheet 1 for all Revision details/information

IQ3