

Liquid Crystal Display Module 3-LCD





Overview

The Main Display interface is the primary user interface in the EST3 Life Safety System. The main display interface focuses on the emergency user by putting information important to the user up front. Hands free, the first highest priority event is shown. The display always gives the last highest priority event. Arriving at the panel and without opening the door the first and last alarm is given. Simple to understand lights and switches help the emergency user execute system commands with confidence.

A menu system supports maintenance functions such as disables or reports for use by staff or service personnel.

Standard Features

- Uses simple lights and switches
- Displays information important to user
- Hands free first alarm display
- Last event of highest priority always displays
- Eight lines by 21 character graphic LCD display
 168 characters total
- Multlingual Supports English, French, Spanish, and Russian
- Uses queues to sort events A queue is a list of messages Alarm, Supervisory, Trouble and Monitor
- Slide in LED and switch labels Makes customization for regional language easy

Application

The 3-LCD module mounts to the local rail over the nodes Central Processing Unit Module (3-CPU). The 3-LCD module is optional in any network node.

Ensuring information clarity the 3-LCD uses a backlit high contrast supertwist graphical display. Eight lines of 21 characters provide the room needed to convey emergency information in a useful format.

The 3-LCD always displays the last highest priority event even when the user is viewing other message queues. Further message flexibility is provided with EST3's message routing ability. Messages from a node can display at every node on the network or messages can route to specific nodes only. Routing can be initiated at a specific time/shift change. There is no need to have messages display in areas that are not affected by an event.

The 3-LCD can display messages in English, Spanish, French, and Russian. The bilingual display lets the operator select between either of two languages. Consult your representative for available language combinations.

The EST3 system configures for Proprietary, Local or EN54 market operations. The mode of operation is selected through the System Definition Utility (SDU) which may adjust the following operations slightly to fit the system operation selected.

LEDs and Switches

Further enhancing the 3-LCD user interface are easy to read and understand lights and switches. All functions are laid out in a logical order. At the top of the 3-LCD are five system status LEDs. Here determining the general condition of the system is easy.

Power	Test	CPU	□ Gnd	Disable
		Fail	Fault	

Power LED: Green, on when AC power is on.

Test LED: Yellow, on when any portion of the system (Group) is under test.



CPU Fail LED: Yellow, on when CPU stops running.

Gnd Fault LED: Yellow, on when a ground exists on the system (group)

Disable LED: Yellow, on when any point or zone is disabled by a user.

Below the general status LEDs are located four, LED / Switch common controls. The versatility of EST3 allows system designers to define the features as affecting a domain (defined group of nodes) or as global (affects all nodes) across the network. This feature is very useful when configuring systems with multiple buildings on one network. As an example, operating the reset in one building may have adverse effect in other buildings. With EST3 having operational differences between buildings on the same network is not a problem.

Pressing **Reset** starts the system's reset operation. The yellow LED has three flash rates during reset. The LED flashes fast during the smoke power down phase of reset, flashes slow during the restart phase, and turns on steady for the restoral phase. The Reset LED turns off when the system is normal.

Pressing **Alarm Silence** turns off all Notification Appliance Circuits defined as audible. The yellow LED turns on when silence is active

via the Alarm Silence switch or via alarm silence software timers.

Pressing **Panel Silence** turns off the system's internal audible signal. The yellow LED turns on when panel silence is active. The EST3 panel buzzer has user programmable signal rates for alarm, supervisory, trouble and monitor conditions.

Pressing **Drill** turns on the drill LED and all signals sound evacuation. Drill does not activate city tie connections. Auxiliary relays will not activate unless programmed to do so with drill.



In the center of the 3-LCD is the Liquid Crystal Display. In the normal condition the date and time plus a definable system title display on the LCD. The last line of the display gives an alarm history. This total equals the number of

times the system has entered the alarm state from the normal state.

When active events are on display, the LCD formats into four logical windows.

12:12:12 8000	02 00000
0001 ALARM ACT	TIVE
LOCATION MESSI	
LOCATION MESSI	RGE LINE2
0002 ALARM AC	τινε
0002 ALARM AC Location Messi Location Messi	RGE LINEI
LOCATION MESSI	RGE LINEZ
8002 5000 TC	00 1000

SYSTEM STATUS WINDOW CURRENT EVENT WINDOW LAST EVENT WINDOW TYPE STATUS WINDOW

In the system status window, the display shows the time and the status of active and disabled points.

The current event window, lines 2, 3, 4 automatically display the first active event of the highest priority if the user has not taken control of the system. Once the emergency user takes control, this window displays user message selections.

The second line of the display shows system event information. In the example above the display shows the chronological number of the event (0001 is the first alarm) followed by the event type (Alarm Active). EST3 supports over 45 event type messages from which system designers choose. The last two lines of the current event window are custom programmable location message lines with space for 42 characters.

The last event window shows the last highest priority event. This window is always displayed and updated automatically by the system. Here the emergency user can monitor the progress of a fire.




When EST3 is configured for a local mode system viewing the second alarm message is easy, just press the NEXT key. The next message scrolls into the current event window. The last highest priority event always remains

on view. No matter what queue the user selects for viewing, the LCD always displays the most recent alarm. A new alarm event resounds the panel audible signal and appears immediately on display without overwriting information the user selected for view.

The final window of the LCD the type status window shows the total number of active events by queue type. A is alarm, S is supervisory, T is trouble, and M is monitor. The number following each letter is the number of active events existing in each queue.

EST3 breaks down event types into queues and automatically displays the first event of the highest priority type.



Priority order is alarm, supervisory, trouble, monitor. By using queues an emergency user does not waste time scrolling through a mixed event list looking for alarms or confusing an alarm message with other message types.

EST3 configures for **Remote proprietary** system operation where every event must be acknowledged by viewing them before the internal buzzer will silence. Or the EST3 will configure for **Local** operation. Here the internal buzzer silences by pressing panel silence. If any events exist in queues that have not been viewed the queue LED continues to flash informing the user of un-seen events.

When all events in a queue are acknowledged or 'seen', the LED associated with the queue turns on steady. If a new event is added to the queue, the EST3 internal buzzer resounds and the queue LED flashes.

EST3 allows device grouping into logical group zones. Here two or more alarm devices (such as detectors or pull stations) make up the zone. When a device in the zone activates, the LCD displays the zone description. Each zone only displays once, regardless of the number of devices active within the zone.



Details

To display device information the user presses the Details key. The device with the lowest

address displays in the first window.

If multiple devices are active each is available for viewing by using the arrow associated with the Previous Message Next key and scrolling through the device list.


MRIN MENU	
) 1) STATUS	
2) ENABLE	
3) DISABLE	
4) ACTIVATE	
5) RESTORE	
6) REPORTS	
8000 S000 T000 M0	00 🗸

The common controls easily expand beyond the Main Display interface by adding a Control Display Module and assigning features to its switch controls.

For Maintenance users, the EST3 provides a smooth operating

menu system providing powerful tools for system management, reports, and trouble shooting.

Installation and Mounting

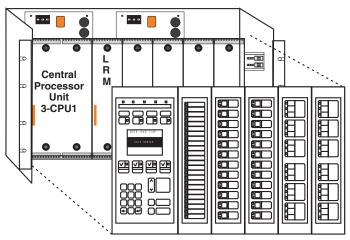

EN54 Compliance

In 1998 the British-based Loss Prevention Certification Board (LPCB) certified EST3 control panels and power supplies as having surpassed the requirements of the pivotal EN54 standard, parts two and four. LPCB Certificate #257c for EST3 fire alarm control panels marked the first such certification since the stringent EN54-2 : 1997 and EN54-4 : 1997 were published by the European Committee for Standardization (CEN). In order to meet these standards, display and control functions have undergone slight modifications for the EN54 marketplace. These differences are highlighted below. All other control and annunciation features remain unchanged.

Note: EN54-2:1997+A1 and EN54-4:1997+A1:2002+A2 approval is pending.

System Status LEDs

Power	□ Test	CPU Fault	☐ Sounder	☐ Disable	
-------	-----------	--------------	--------------	--------------	--

Power LED (Green): on when DC power is on.

Test LED (Yellow): on when any portion of the system (Group) is under test.


CPU Fault LED (Yellow): on when CPU stops running (processor failures must be manually reset).

Gnd Fault LED: Not available.

Sounder LED (Yellow): flashing indicates fault on sounder circuit. Steady indicates a disabled sounder circuit.

Disable LED (Yellow): on when any point or zone is disabled by a user (disabled conditions have priority over fault conditions).


Switch Functions



Pressing **Sounder On/Off** turns off all sounder circuits defined as audible. The yellow LED turns on when silence is activated via the Sounder On/Off or via the alarm silence software timers.

See Page 2 for descriptions of Reset, Panel Silence, and Drill functions.

Event Queues



For EN54 compliance, EST3 configures for remote proprietary system operation. This requires that every event must be acknowledged by viewing them before the internal buzzer will silence. The priority order is Fire, Fault, Disable, Monitor. EN54-2:1997+A1 and EN54-4:1997+A1:2002+A2 approval is pending.



Detection & alarm since 1872

U.S. T 888-378-2329 F 866-503-3996

Canada Chubb Edwards T 519 376 2430 F 519 376 7258

Southeast Asia T : +65 6391 9300 F : +65 6391 9306

India T : +91 80 4344 2000 F : +91 80 4344 2050

Australia T +61 3 9239 1200 F +61 3 9239 1299

Europe T +32 2 725 11 20 F +32 2 721 86 13

Latin America T 305 593 4301 F 305 593 4300

utcfireandsecurity.com

© 2010 UTC Fire & Security. All rights reserved.

Engineering Specification

The system shall provide a user interface that displays system events in a text format, and supports basic common control LEDs and switches. The Common Control Switches and LEDs provided as minimum will be; Reset switch and LED, Alarm Silence switch and LED, Panel Silence switch and LED, Drill switch and LED. It must be possible to add additional common controls as required through the use of modular display units. The user interface must provide an LCD that will allow custom event messages of up to 42 characters. The interface must provide a minimum of eight lines by 21 characters and provide the emergency user, hands free viewing of the first and last highest priority event. The last highest priority event must always display and update automatically. Events shall be automatically placed in easy to access queues. It shall be possible to view specific event types separately. Having to scroll through a mixed list of event types is not acceptable. The total number of active events by type must be displayed. Visual indication must be provided of any event type which has not been acknowledged or viewed. It must be possible to customize the designation of all user interface LEDs and Switches for local language requirements. It shall be possible to have a custom message for each device in addition to zone messages. Custom device messages must support a minimum of 42 characters each. Instructional text messages support a maximum of 1,000 characters each. The display shall be capable of displaying English, Spanish, French, or Russian messages.

Technical Specifications

Catalog Number	3-LCD
Agency Listings	UL, ULC, FM, CE, LPCB EN54* pending.
LCD Display	Eight lines by 21 characters backlit LCD
Mounting	Two local rail spaces on top of 3-CPU
	Reset switch and LED
Common Control	Alarm Silence switch and LED
Switches and LEDs	Panel Silence switch and LED
	Drill Switch and LED
Alarm Current	42mA
Standby Current	40mA
* ENE4 2:1007: A1 and ENE4	4:1007 . 41:2002 . 42 panding

* EN54-2:1997+A1 and EN54-4:1997+A1:2002+A2 pending

Ordering Information

Catalog Number	Description	Shipping Weight, lb. (kg)
3-LCD	Liquid Crystal Display Module	.8 (.36)
3-LKE	UK English Label Kit	.25 (.11)
3-LKF	French Label Kit	.25 (.11)
3-LKR	Russian Label Kit	.25 (.11)
3-LKS	Spanish Label Kit	.25 (.11)

50